


Salice

- Adapters allow surface mounting, making on-site installation easy
- Order appropriate SMOVE from page 9.71

SMOVE Installation instructions for adhesive adapters:

1. Clean and de-grease the cabinet surface where the adapter is to be installed using denatured alcohol or an acetone based cleaner.
2. Remove the protective strip from the adhesive.
3. Place the adapter in position and apply a firm pressure for about one minute.
4. Insert SMOVE into the adapter.
5. Allow a period of 12 hours to elapse before using.

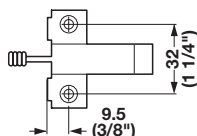


For face-frame doors with lip

- Screw-mount

Material: Plastic

Color	Model	Item No.
beige	D066SNBN	356.11.470

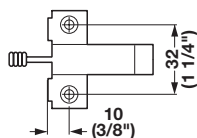


For face-frame doors with lip

- Screw-mount
- For 343.60, 343.61, and 343.88 series face-frame hinges

Material: Plastic

Color	Model	Item No.
beige	D067SNBN	356.11.490

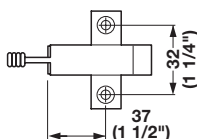


For overlay doors with lip

- Screw-mount

Material: Plastic

Color	Model	Item No.
beige	D064SNBN	356.11.460

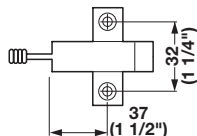


For overlay or inset doors without lip

- Screw-mount

Material: Plastic

Color	Model	Item No.
beige	D064SNBR	356.11.462

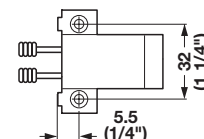


For double doors with lip

- Screw-mount

Material: Plastic

Color	Model	Item No.
beige	D070SNBN	356.11.480
light brown	D070SNQN	356.11.180

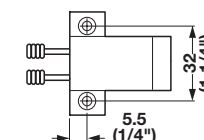


For inset double doors without lip

- Screw-mount
- Can be used for pocket doors

Material: Plastic

Color	Model	Item No.
beige	D070SNBR	356.11.481

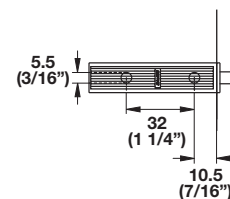

For frameless or inset doors without lip

- Screw-mount

Material: Steel, zinc

Model	Item No.
D076XX9R	356.11.592